




PL - INSTRUKCJA MONTAŻU
 SK - NÁVOD NA ZOSTAVENIE
 CZ - NÁVOD K SESTAVENÍ
 HU - SZERELÉSI ÚTMUTATÓ
 HR - UPUTE ZA MONTAŽU
 RS - УПУТСТВО ЗА МОНТАЖУ

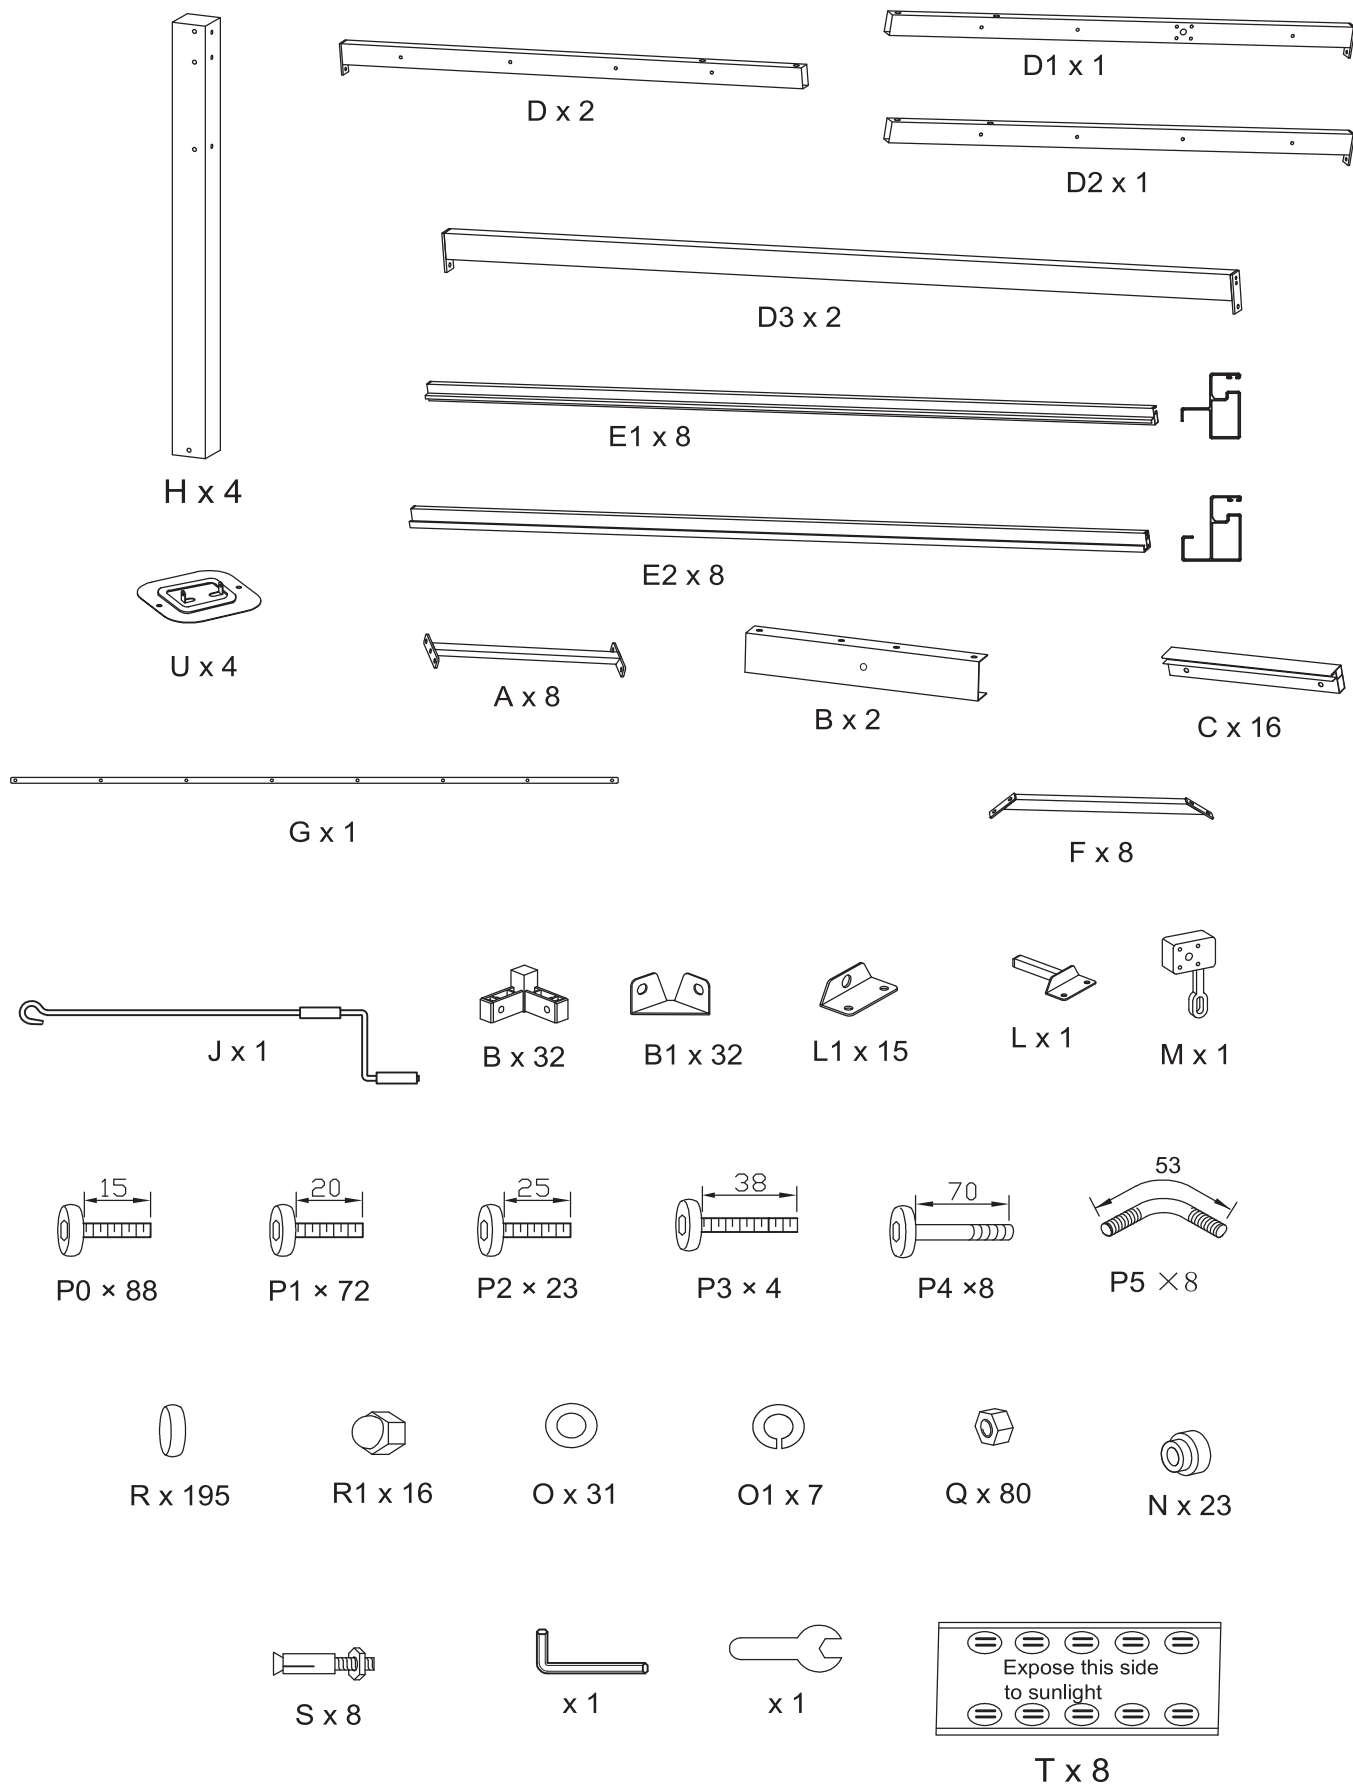


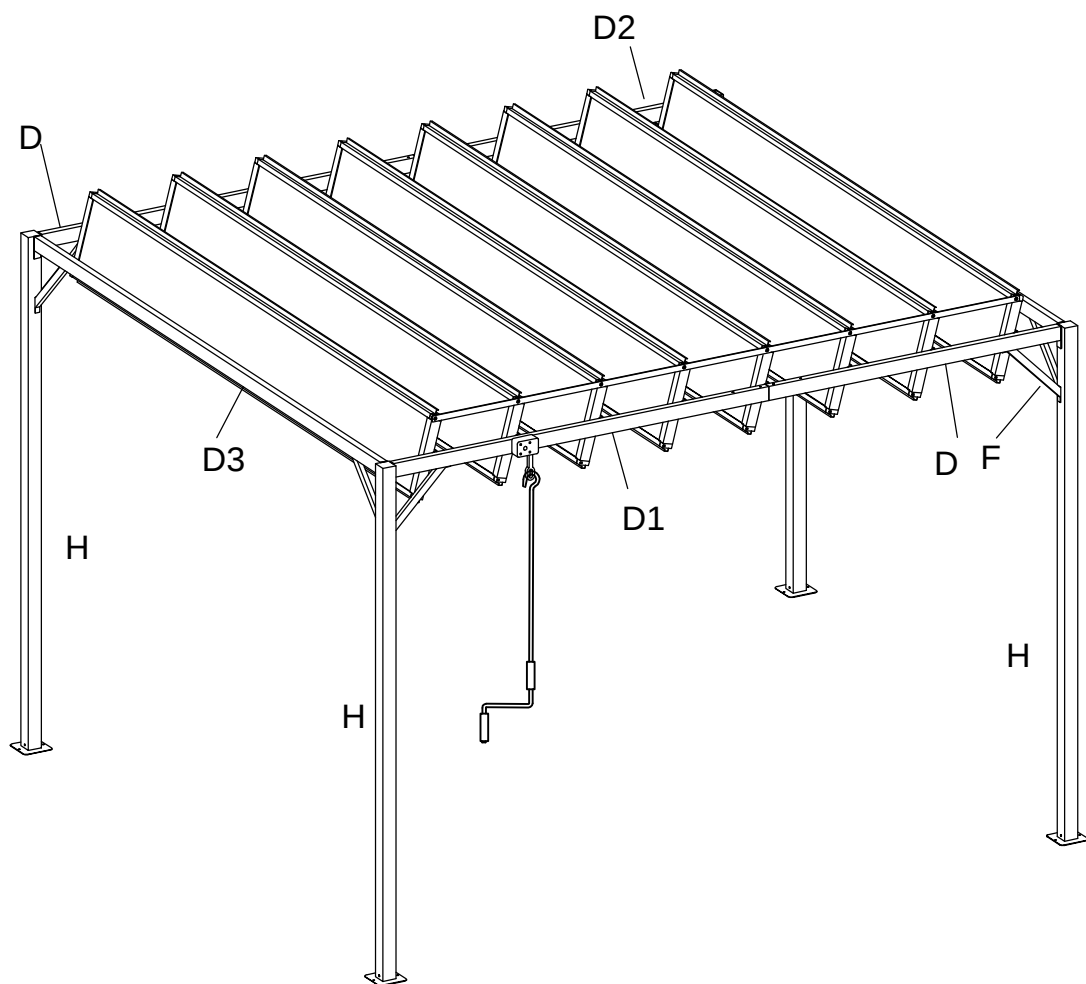


1

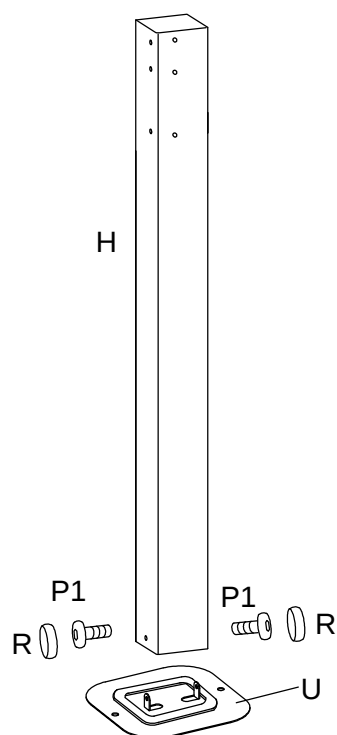


2

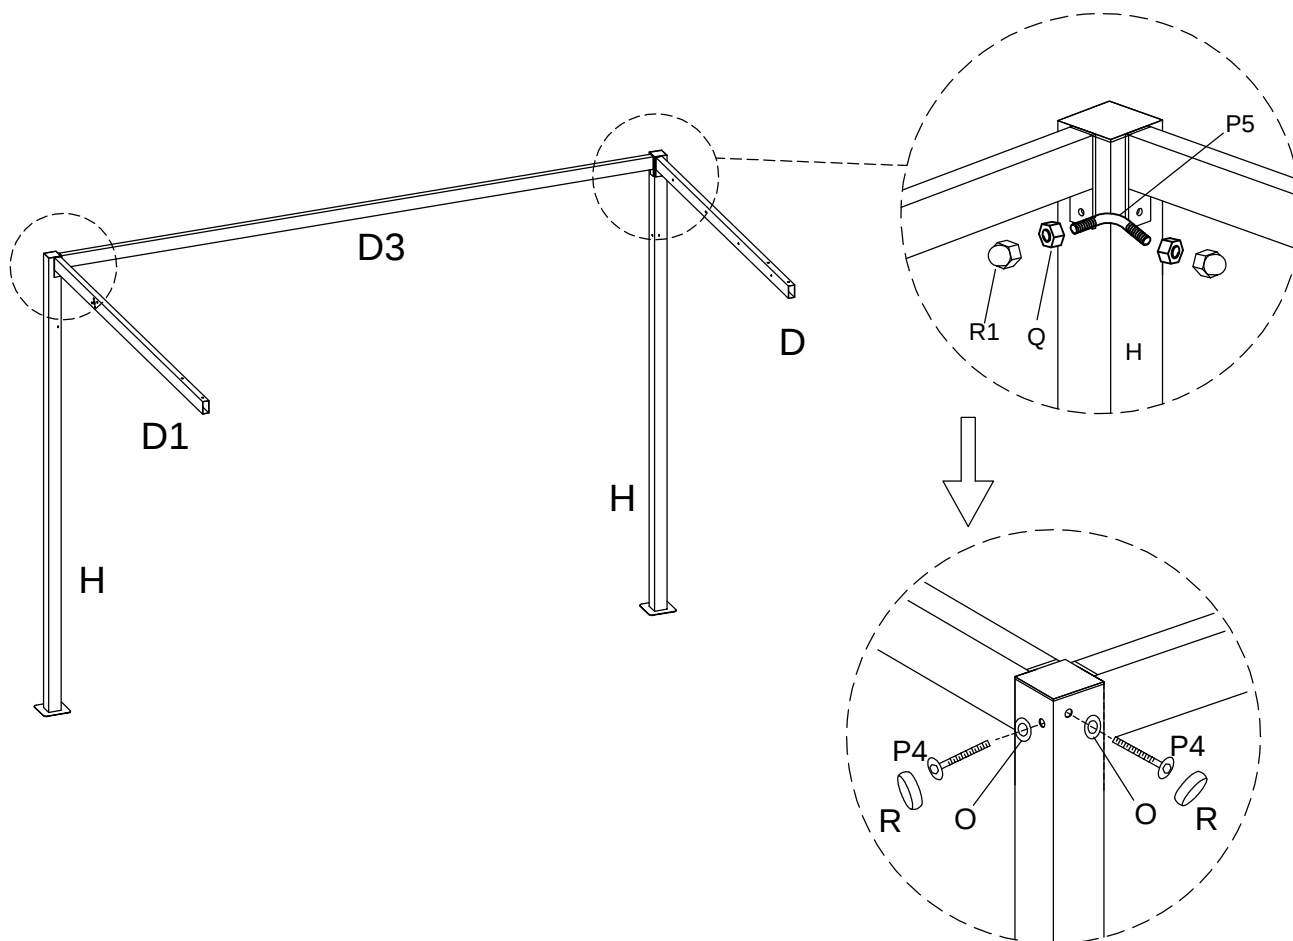


3

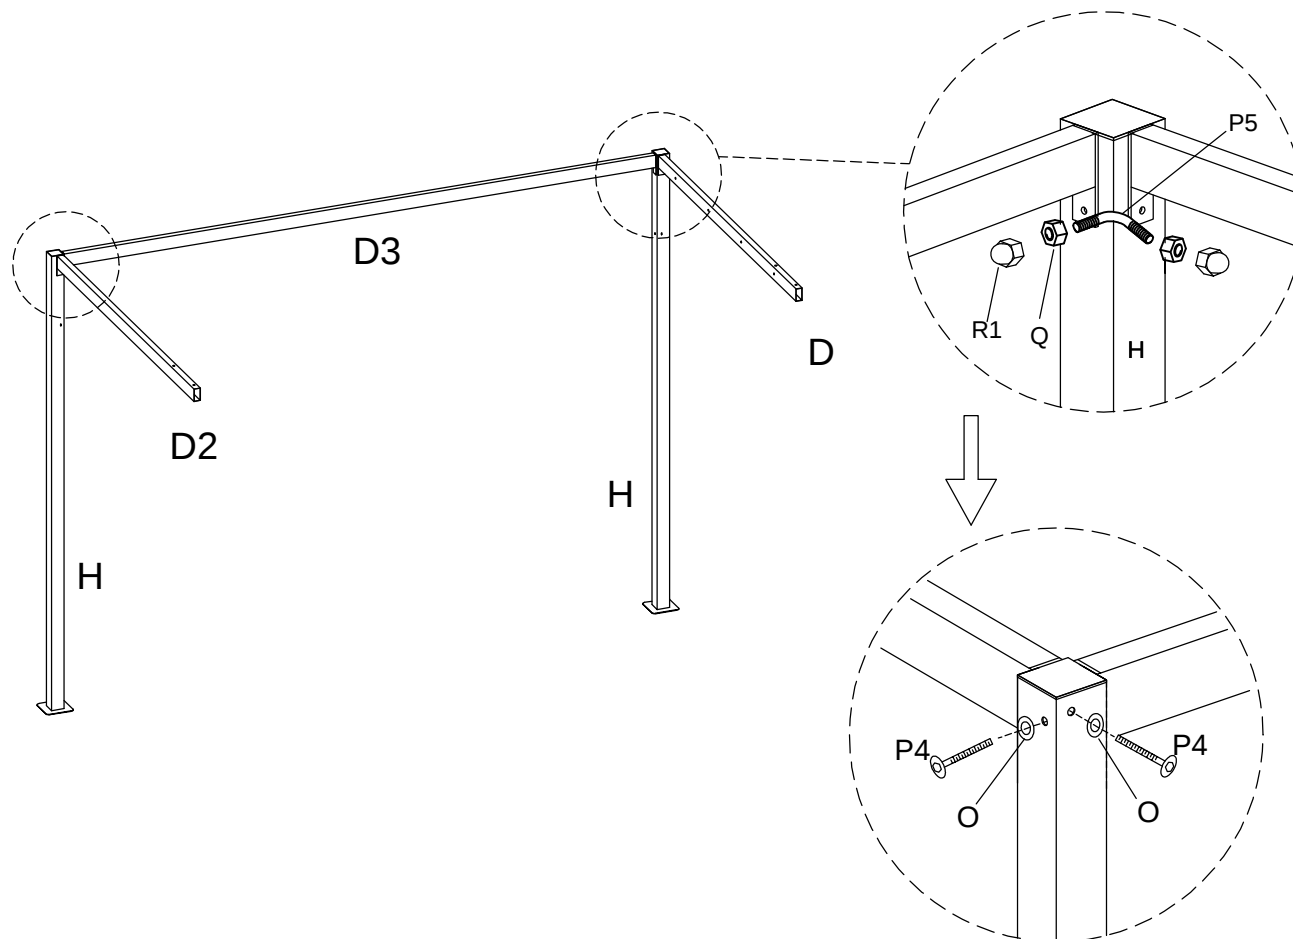


4

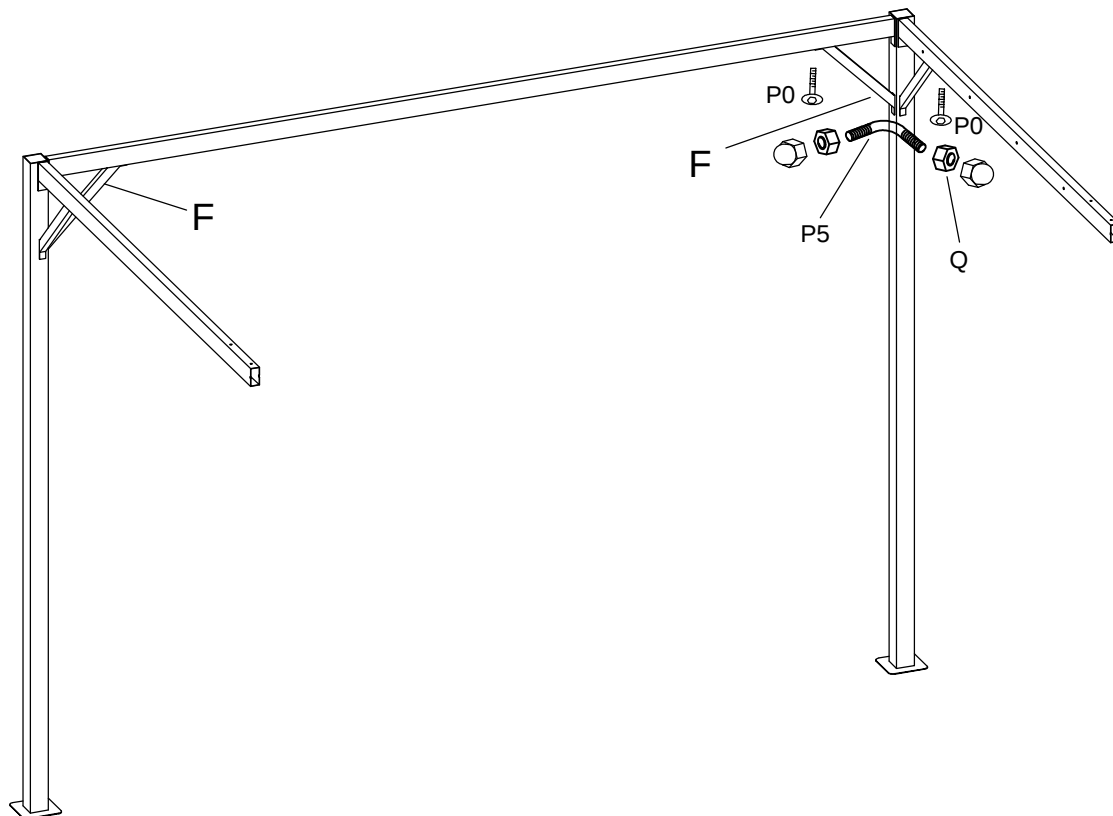


5

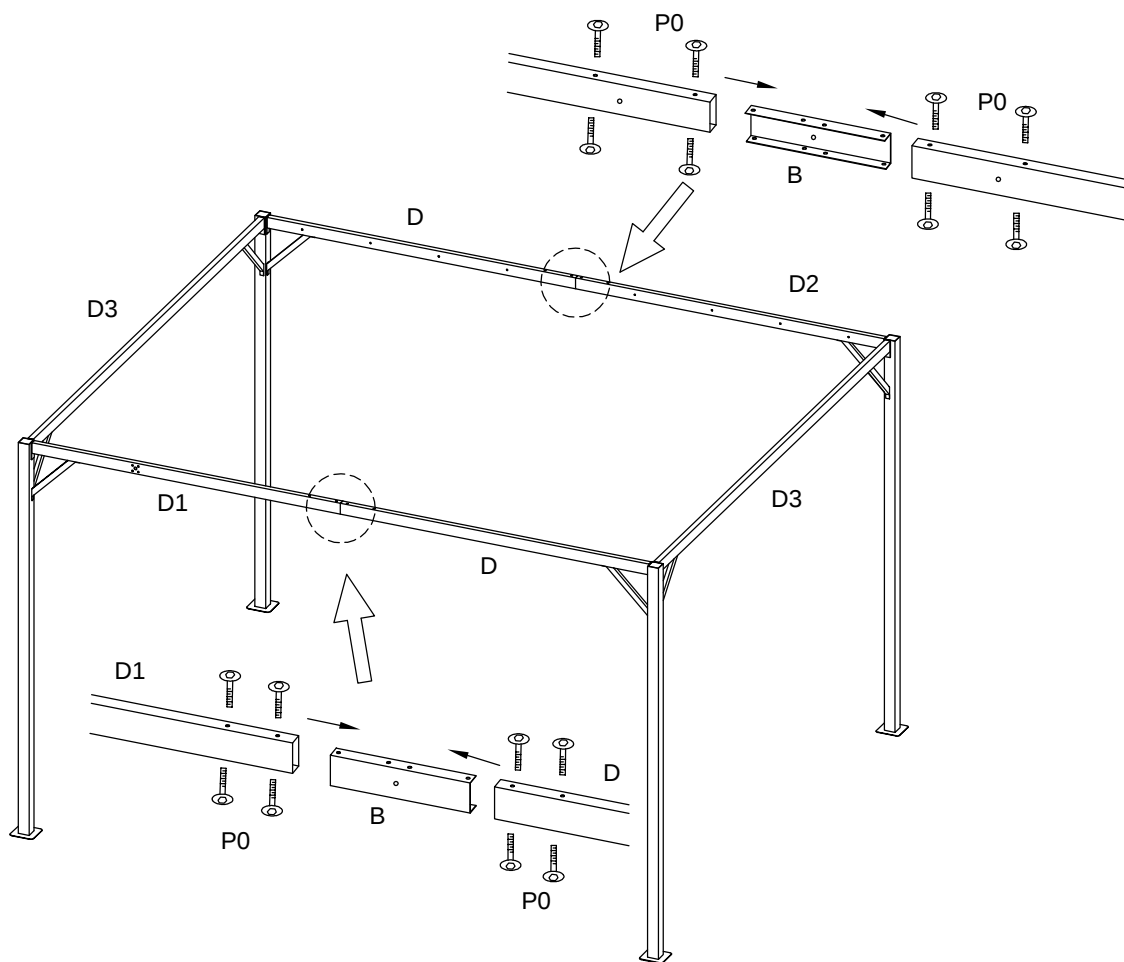

6

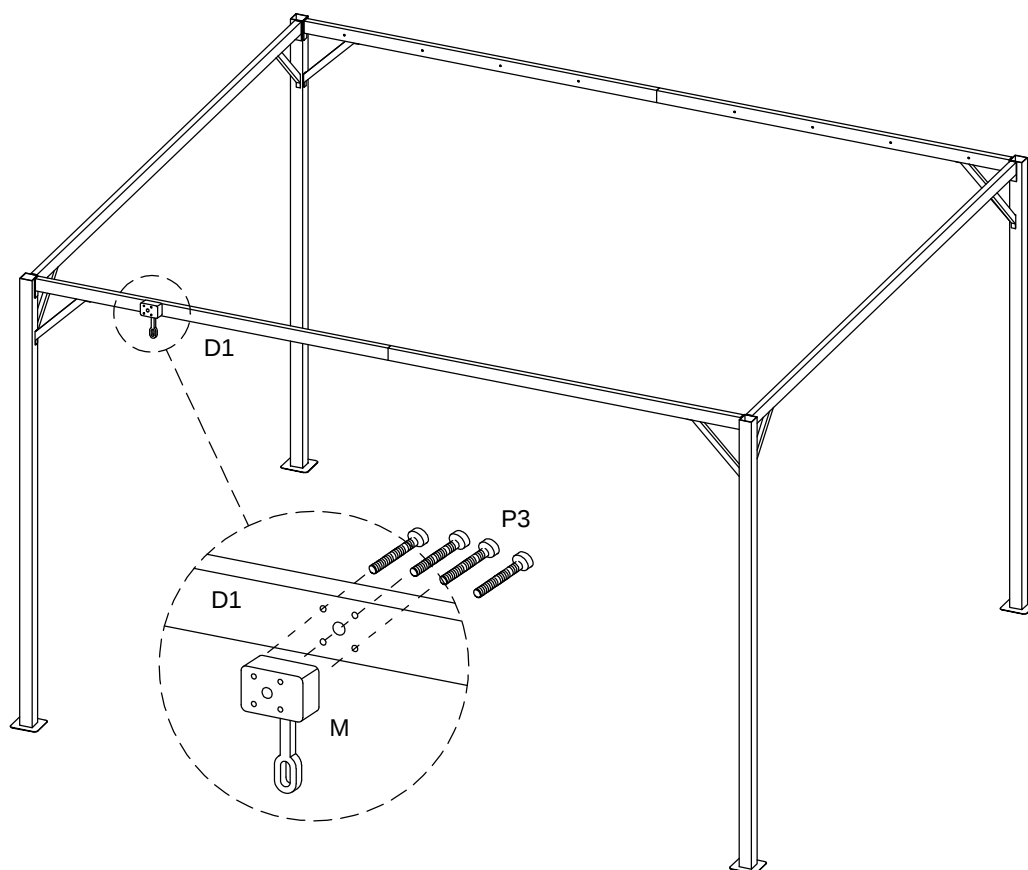


7

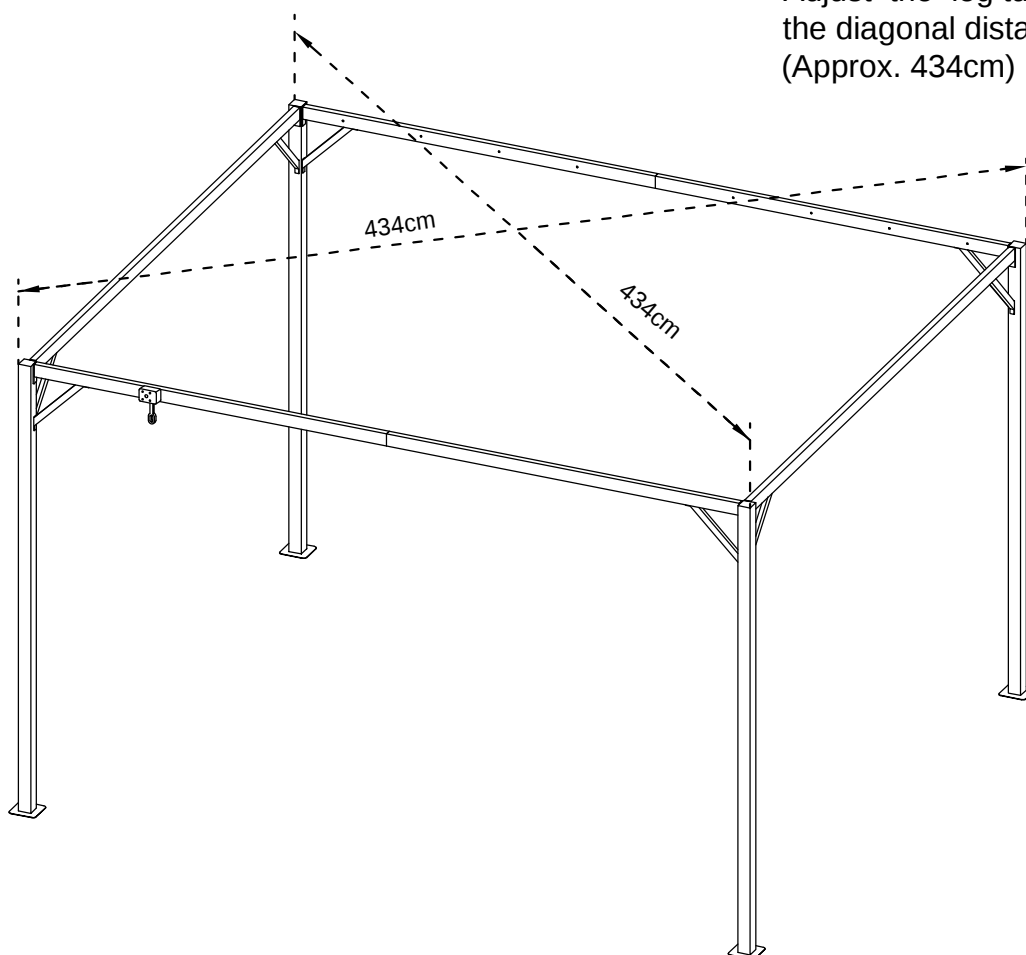


Tips:
Adjust the leg tube position to ensure
the diagonal distance are equal.
(Approx. 434cm)

8


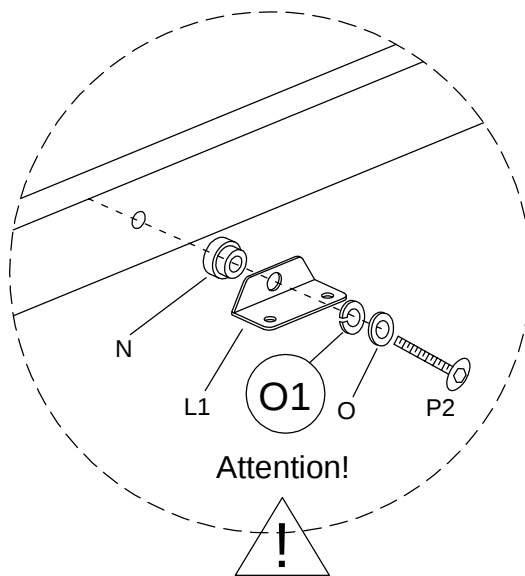


Tips:
This step need to use of
gasket O1


Attention!

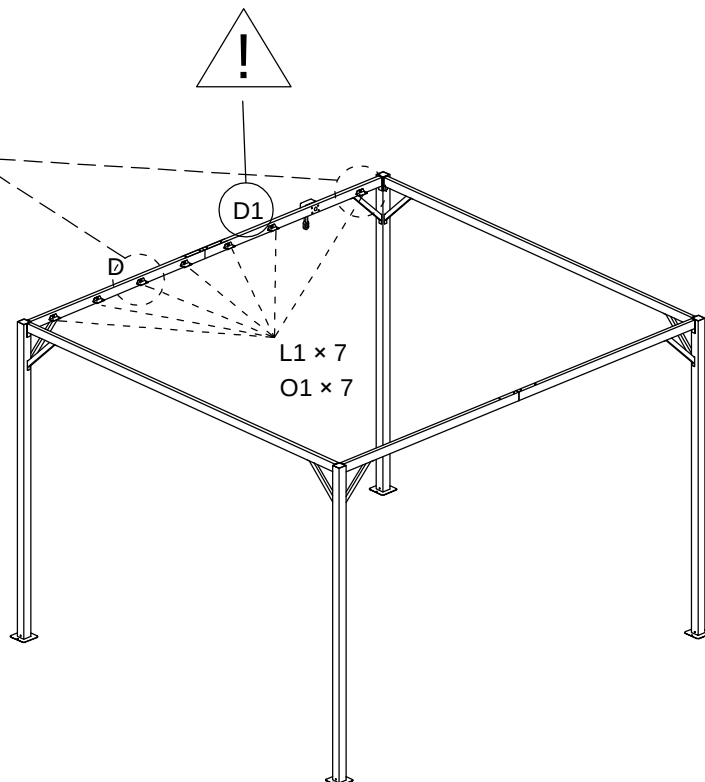


9

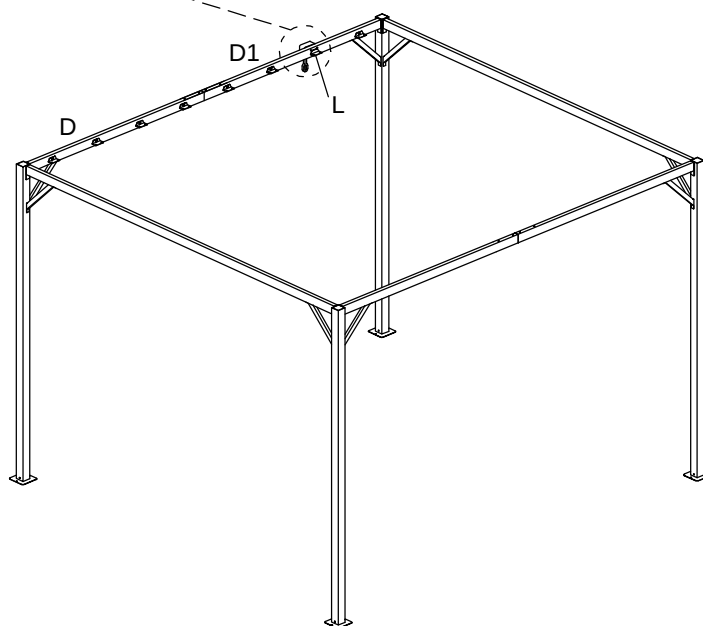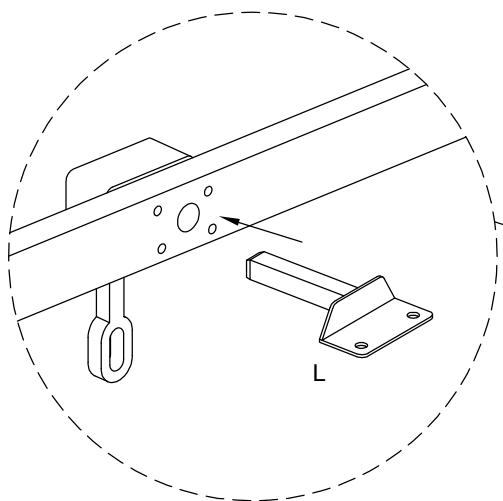



10

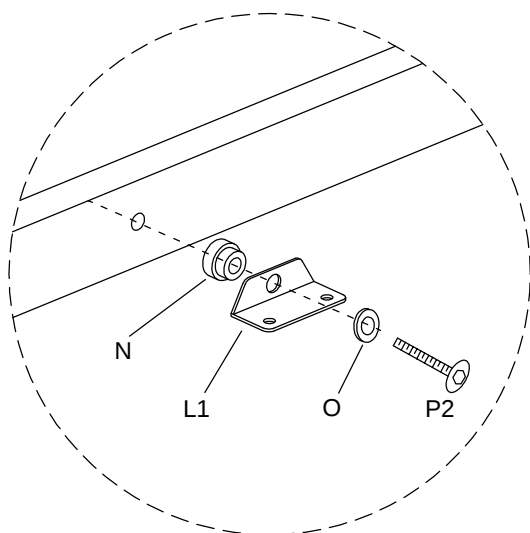

Tips:
This step does not need to use
of gasket O1

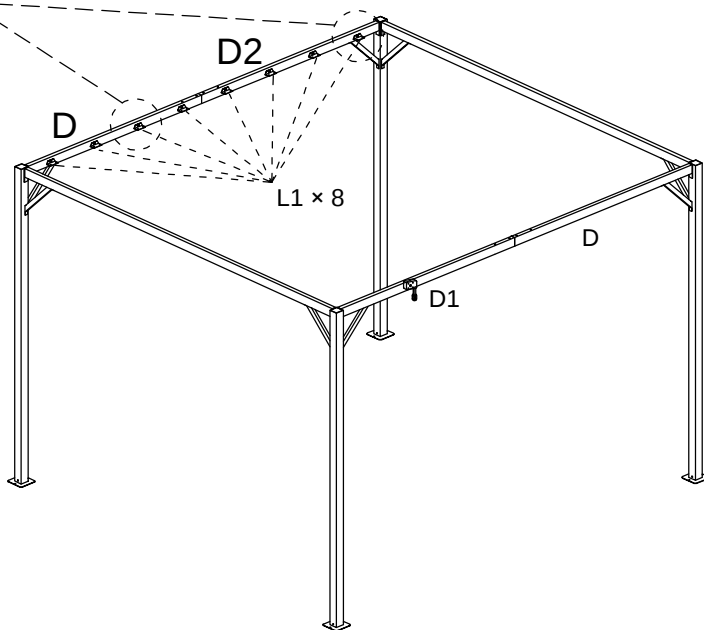


11

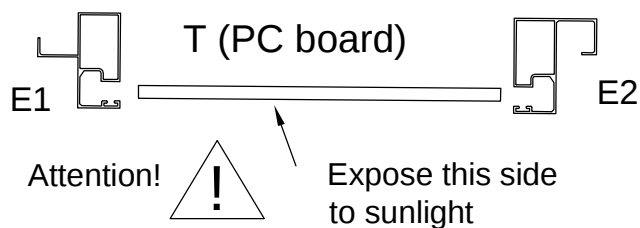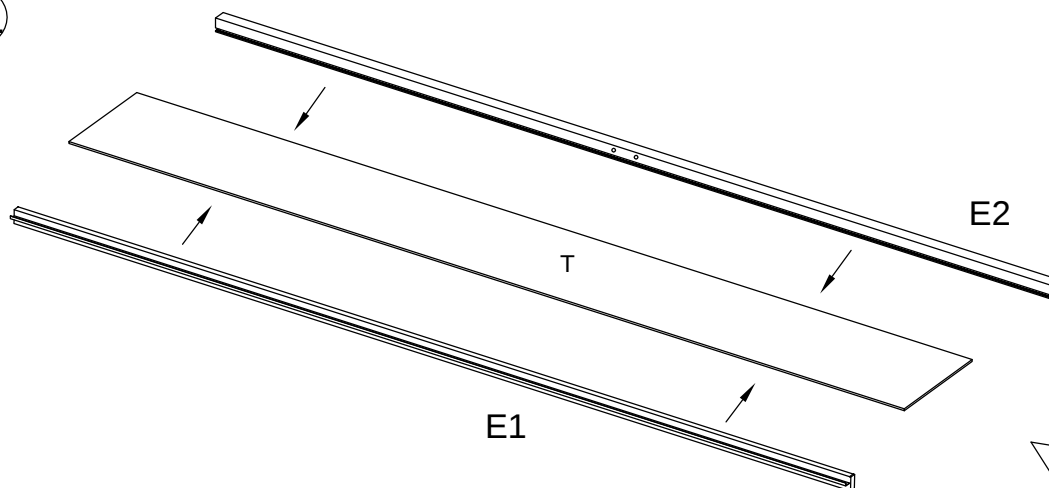


Please install PC panels according to the instruction label on PC panels.

12


Step 1

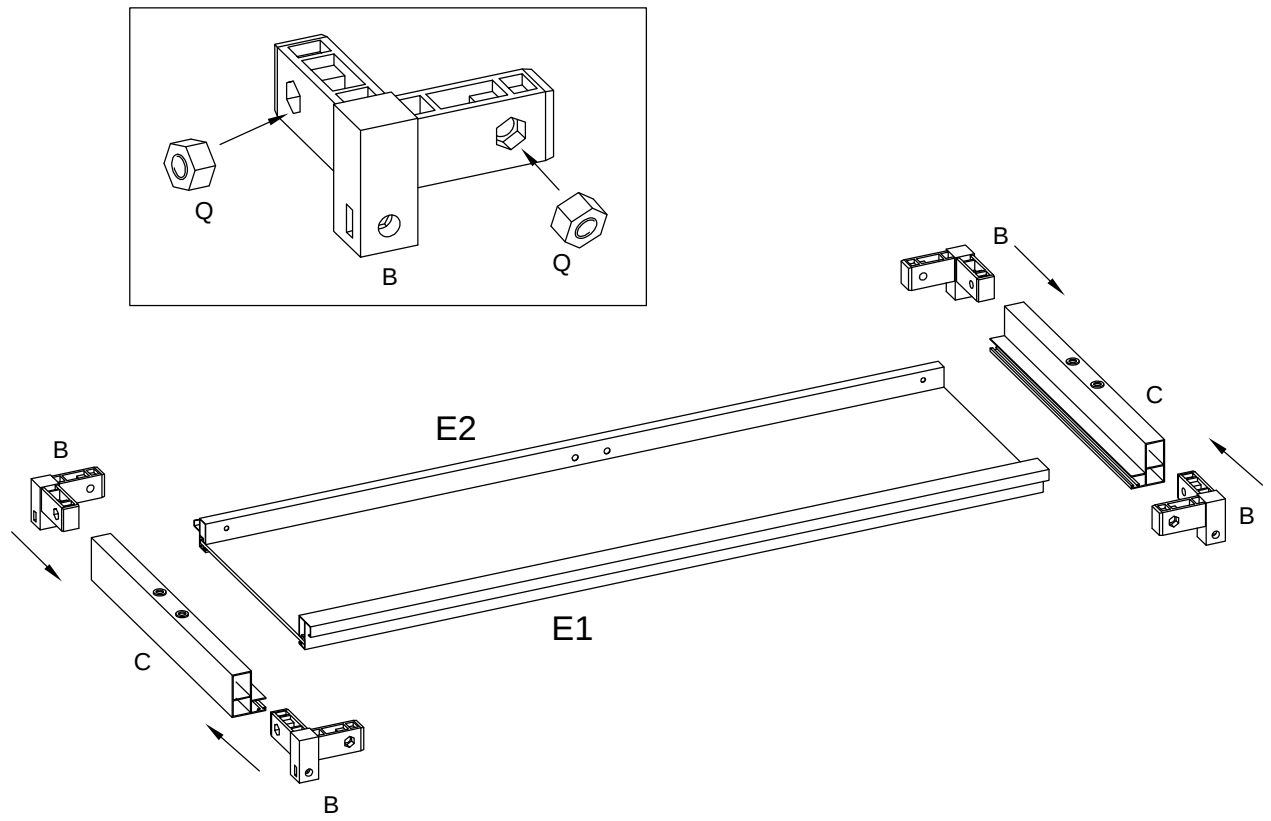


13

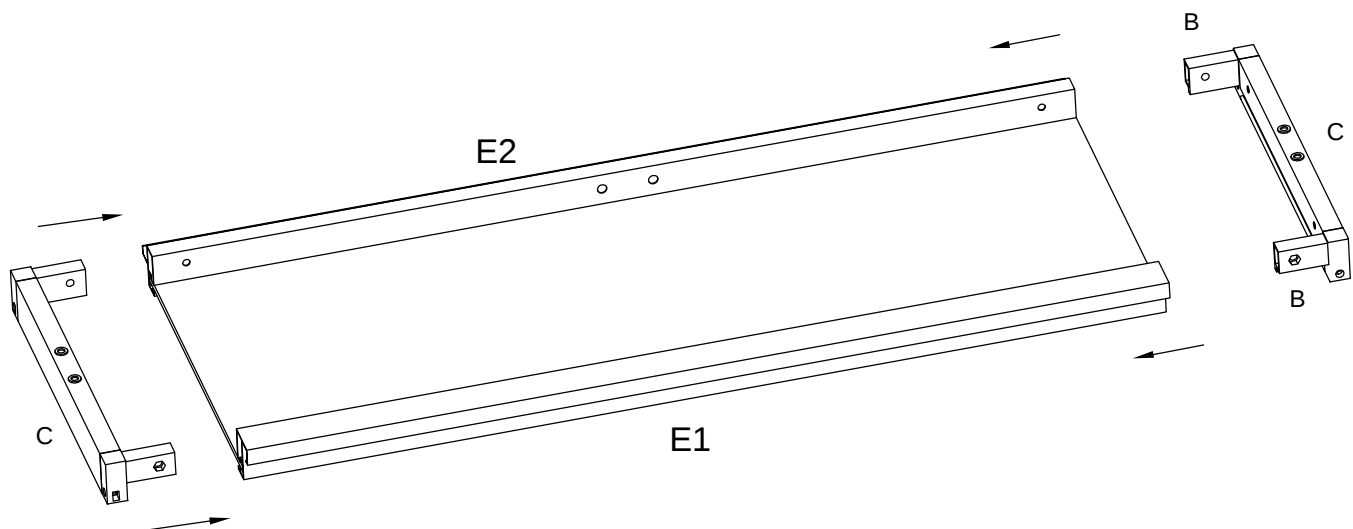



14

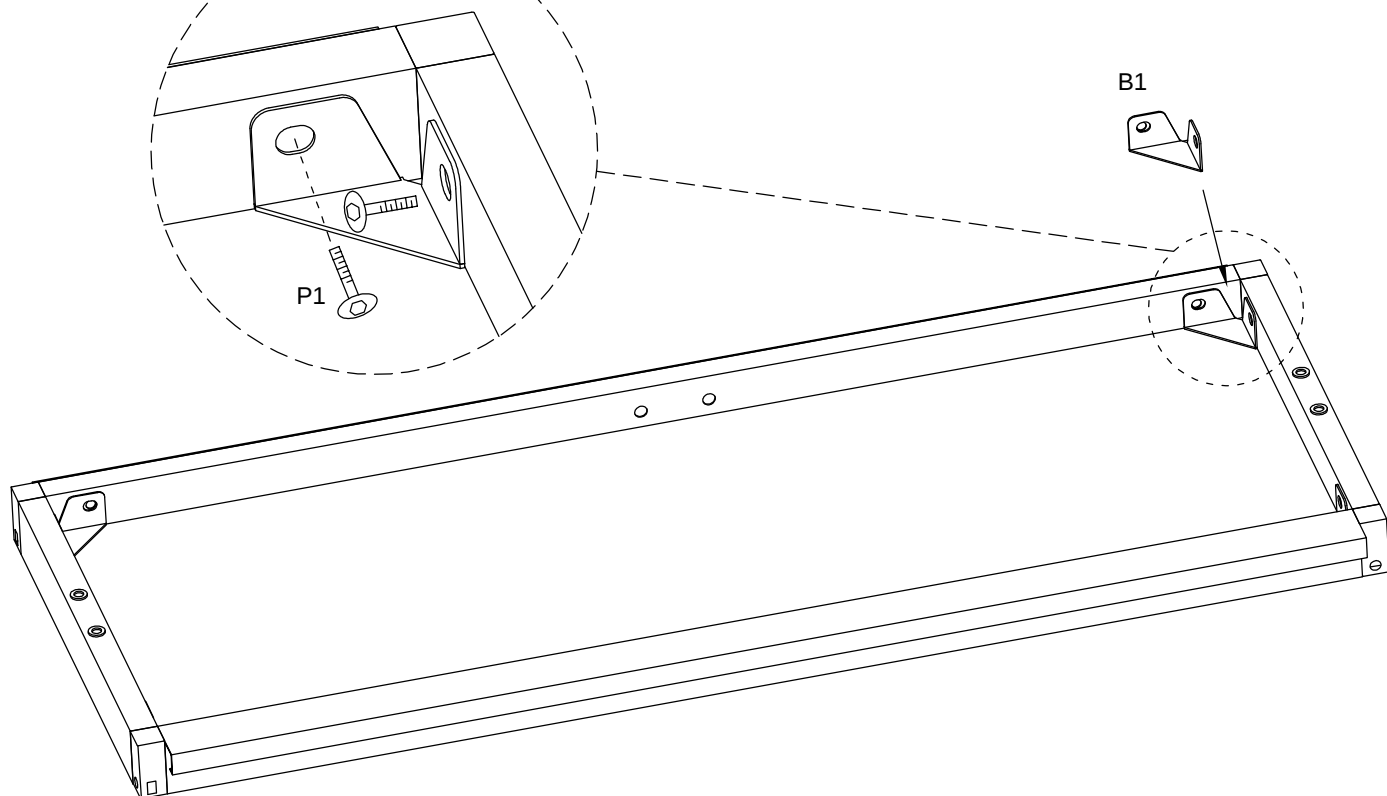


15

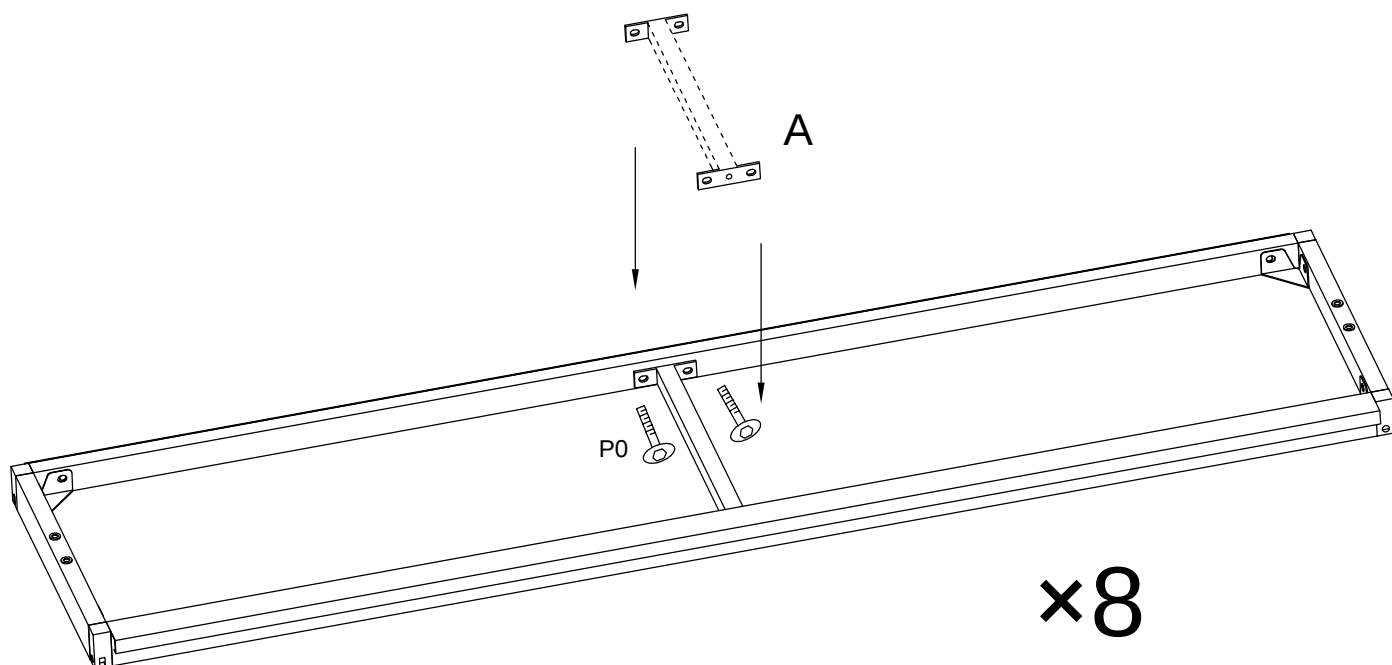

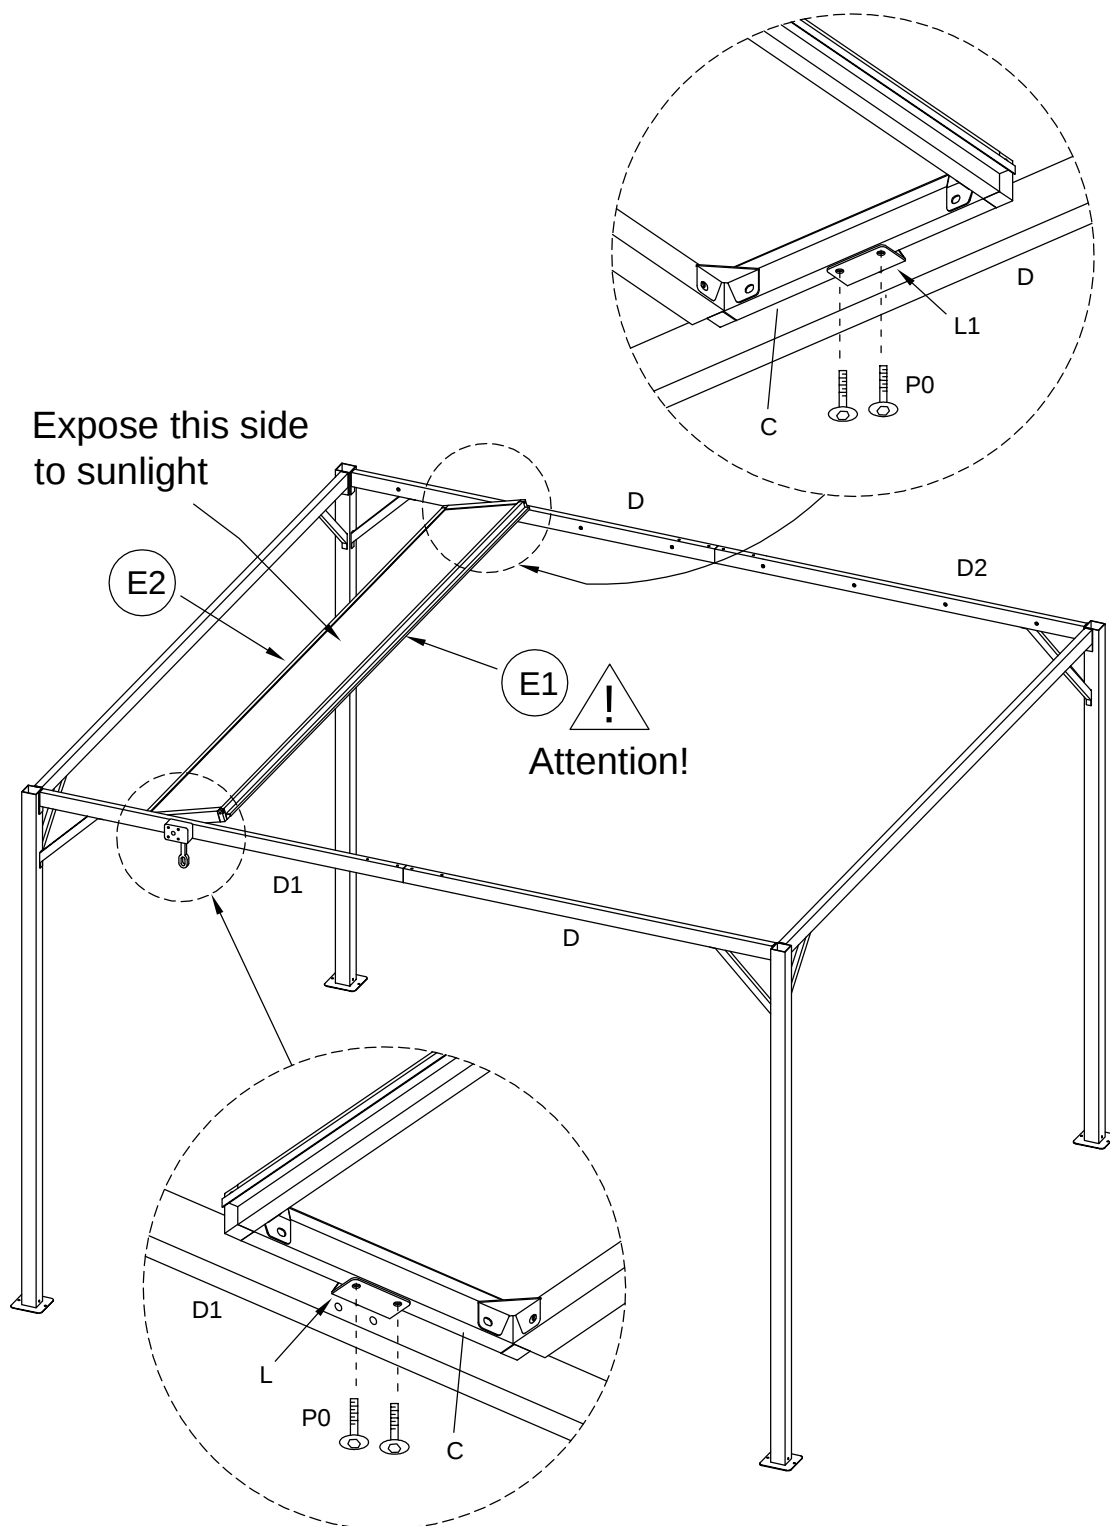

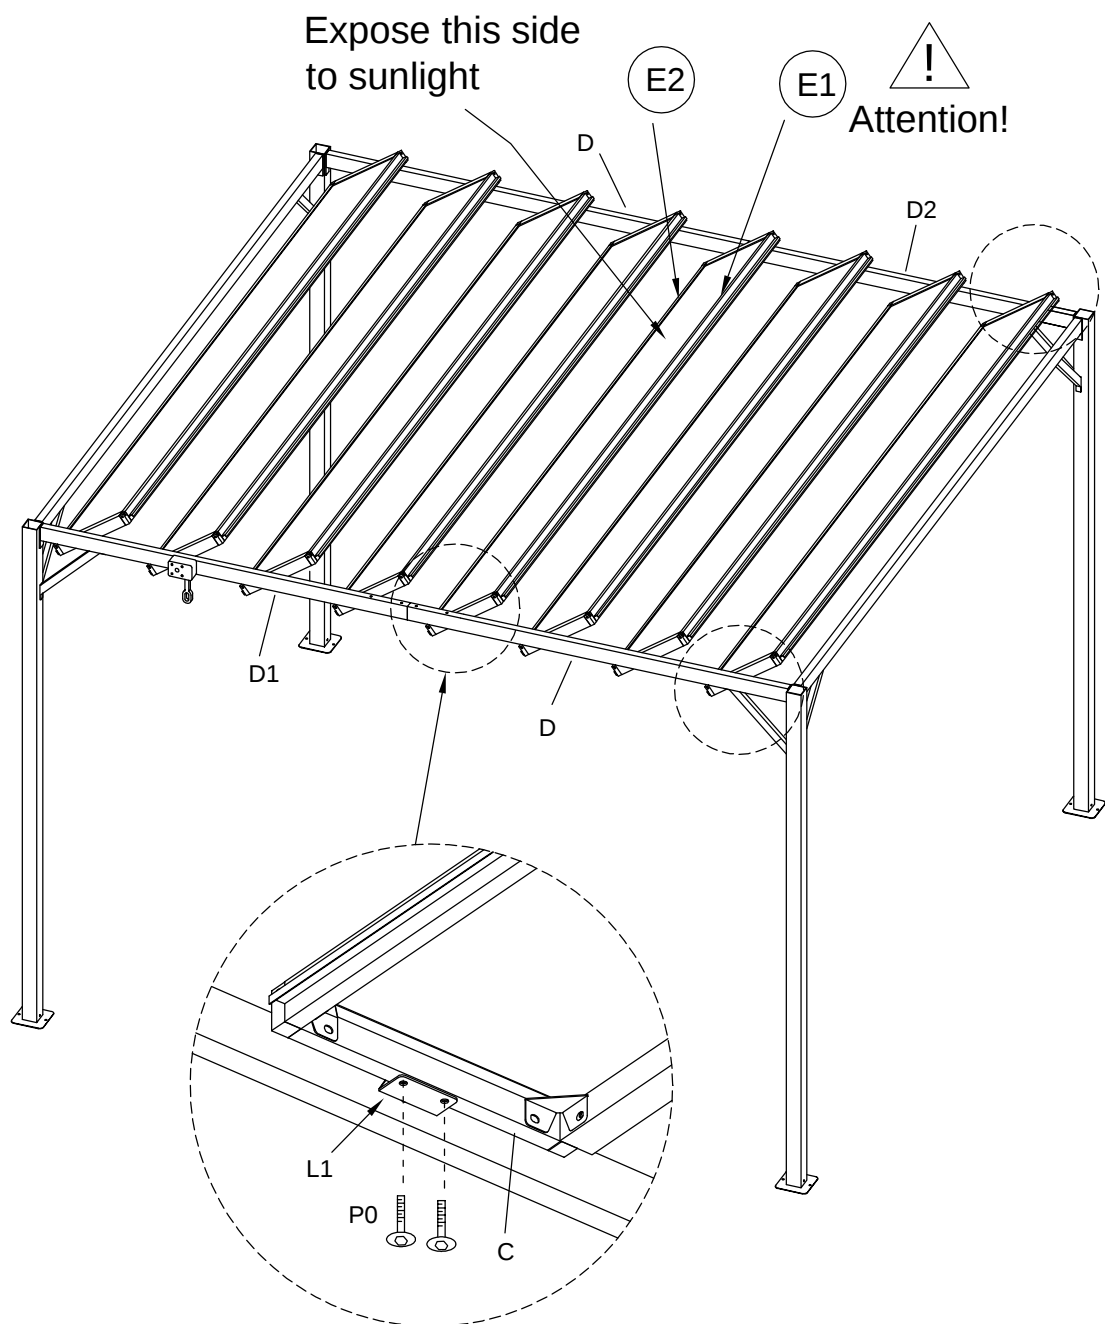


18

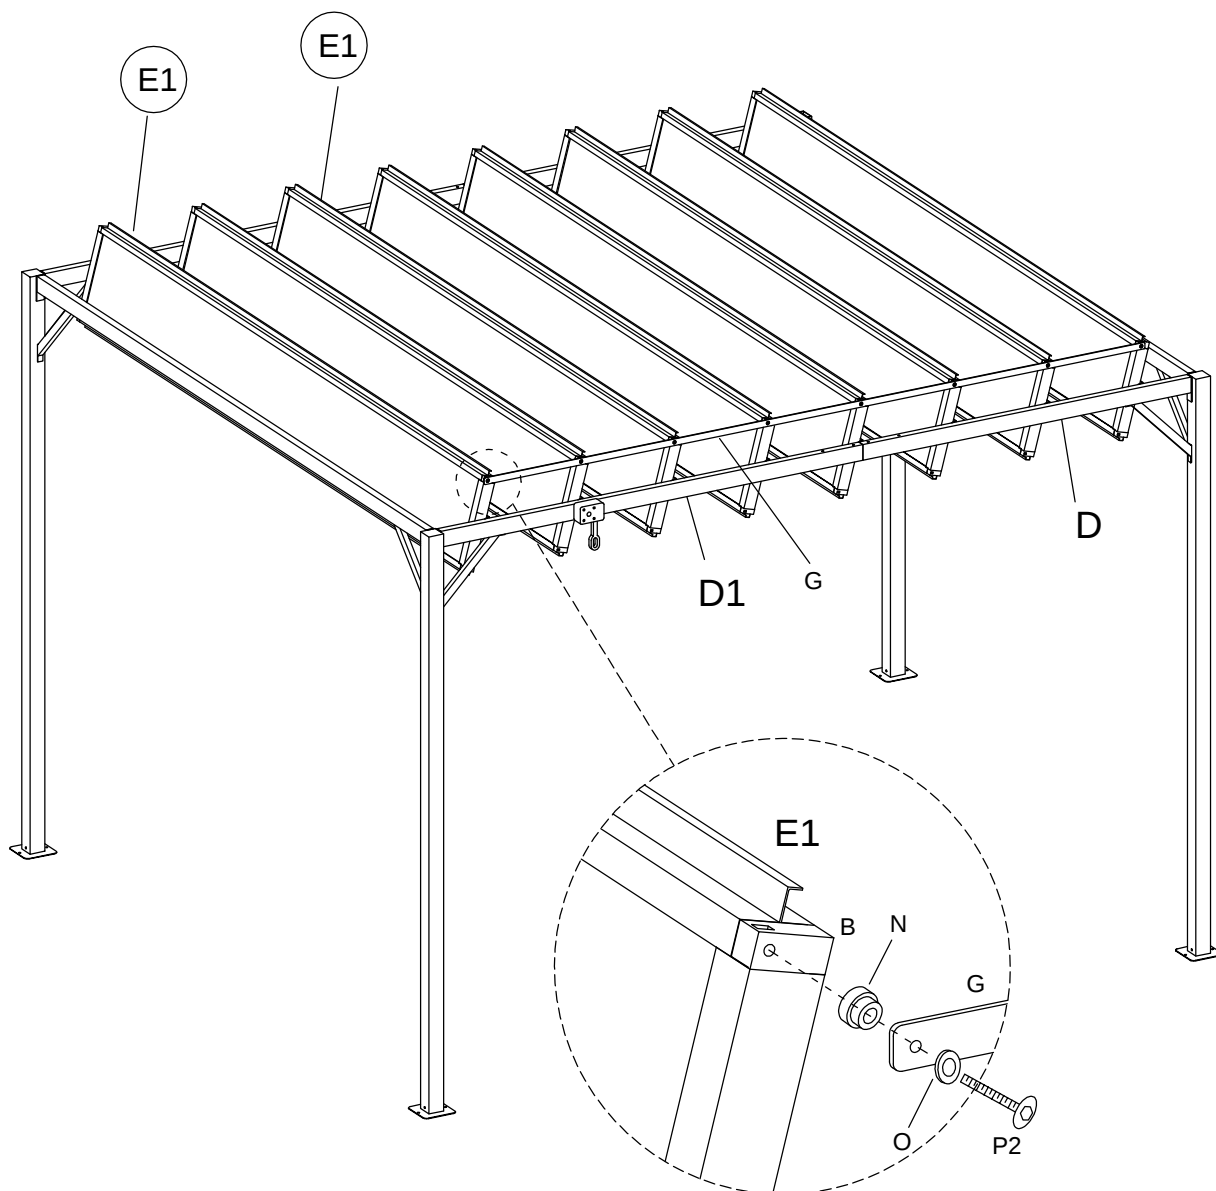


! Attention!

Step 1

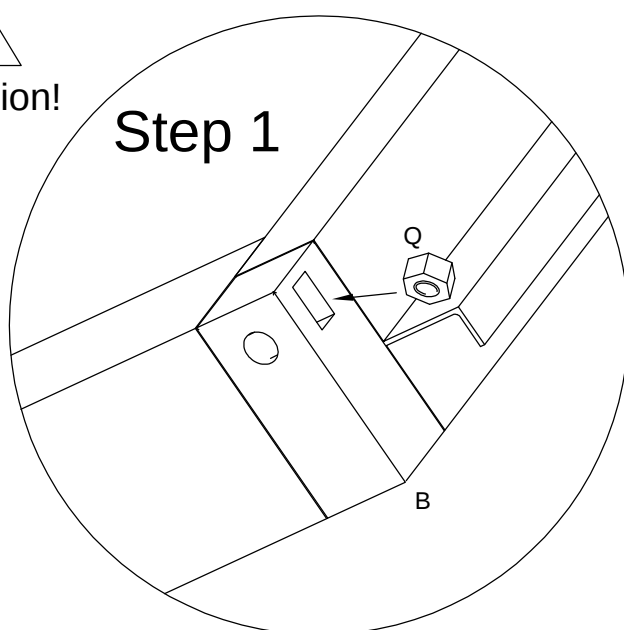

Make sure all PC panels are installed in correct direction, then peel off the labels .

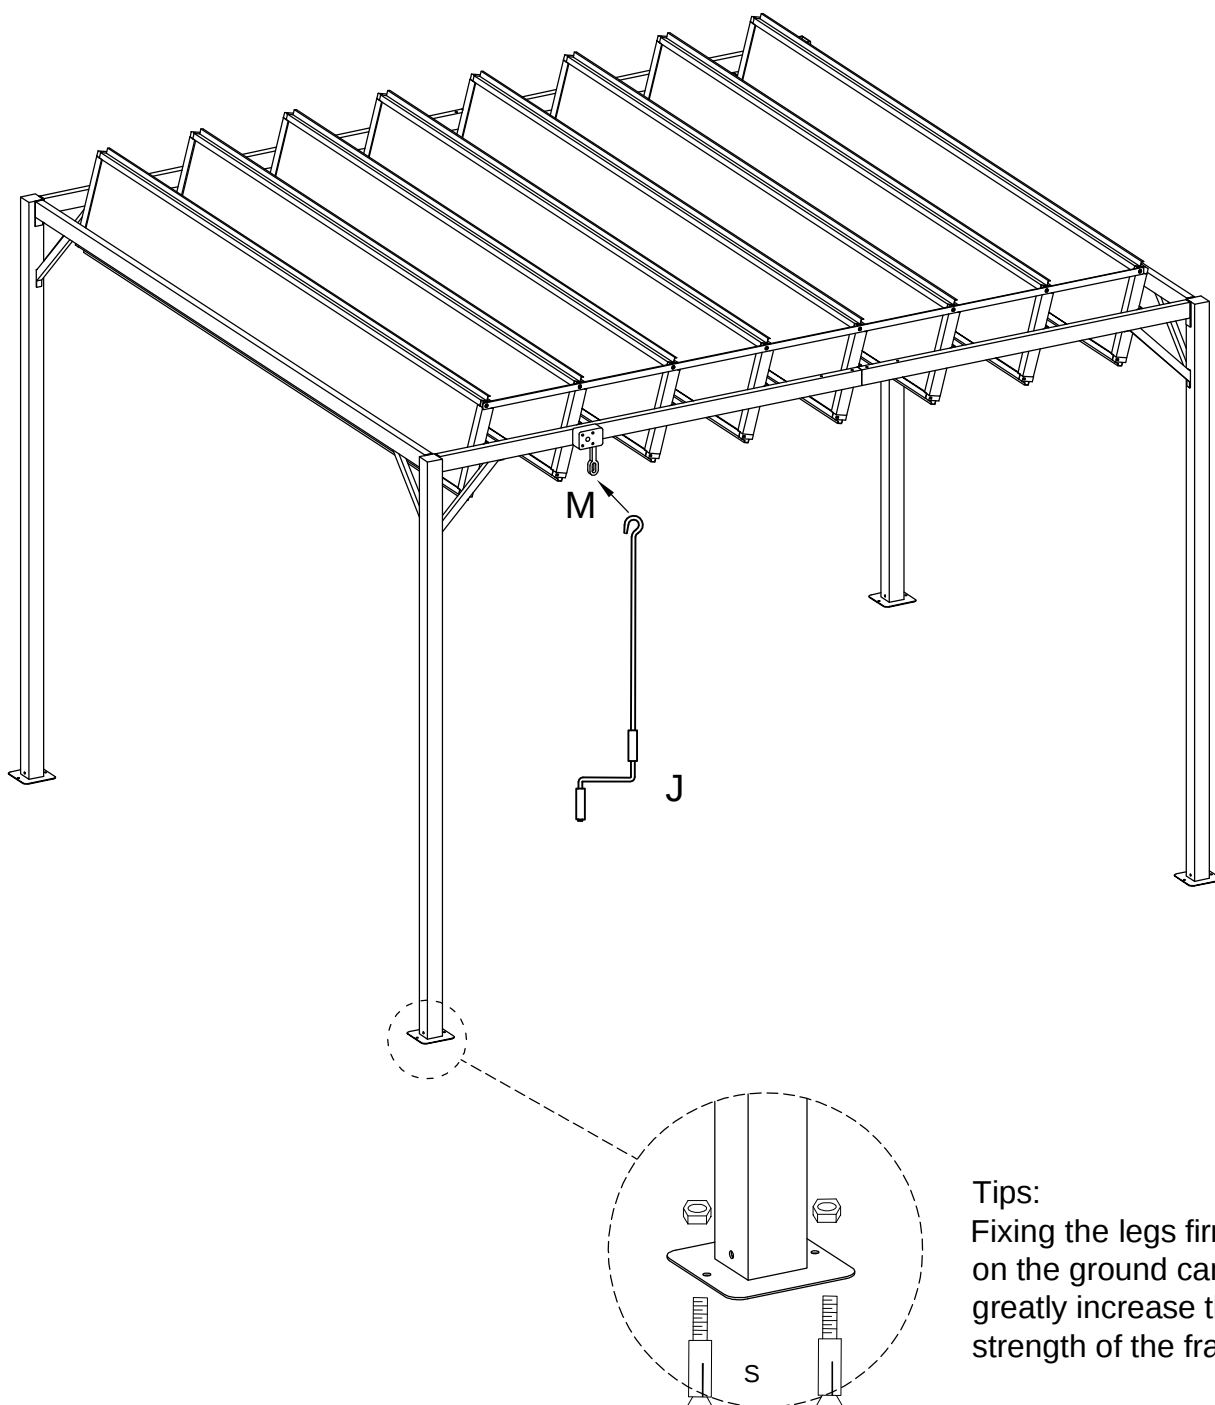

Tips:
Fixing the legs firmly
on the ground can
greatly increase the
strength of the frame.