

# CAMPARI D3-ID6

1.

Hardware list:

- G1x8
- K x1
- P2x2
- D1x4
- N1
- ZP x2
- B5x13
- B6x4
- R3 x24
- B5x2
- A x8
- G2 x8
- B1x2
- K6 x4
- K5 x4

Hardware list:

- 8a
- 8b

Tools: Hammer, Screwdriver

Warning icon: !

2.

Hardware: A x8, D1 x4

Warning icon: !

3.

Hardware: B5 x2, B5 x13

Warning icon: !


4.

Hardware: G2 x4, G1 x4



5.

Hardware: G2 x4, G1 x4

Warning icon: !

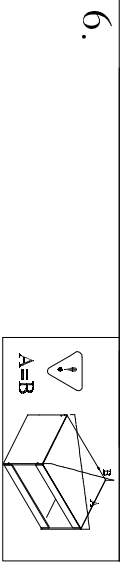




6.1

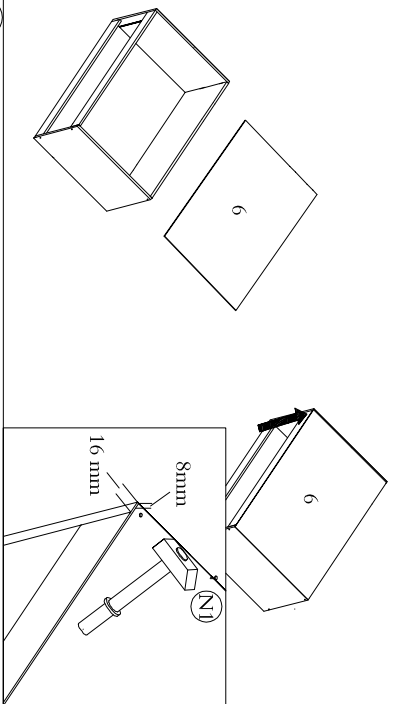

7.  $\varnothing 4 \times 16$

7.1





7.2

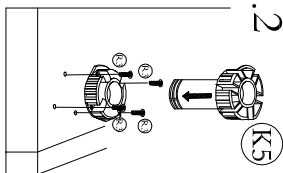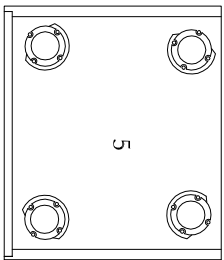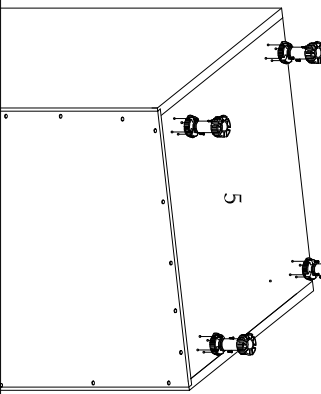



8.

D3-D6L


D3-D6P

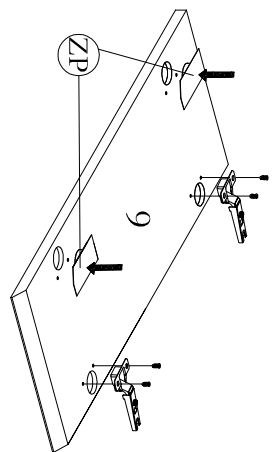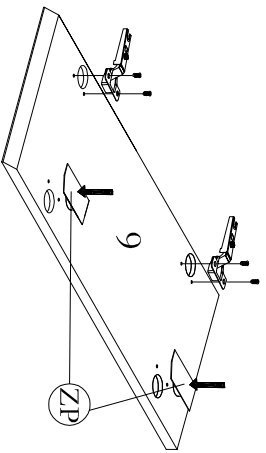



9.

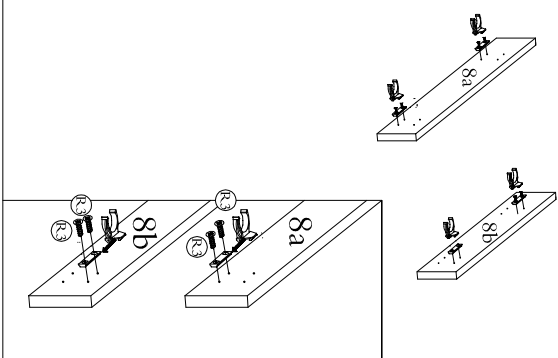

10.1

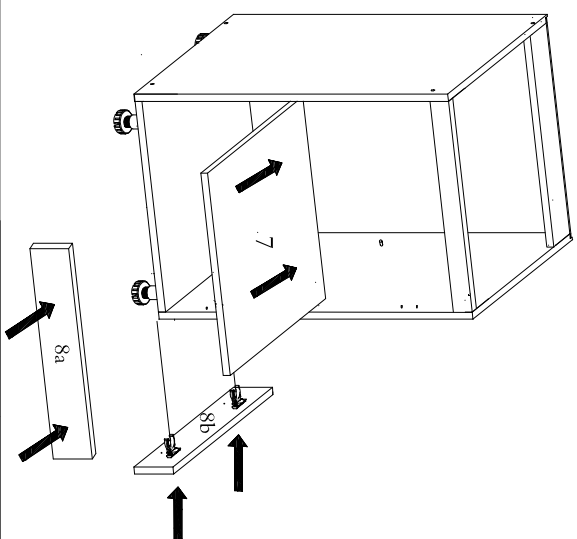

11.

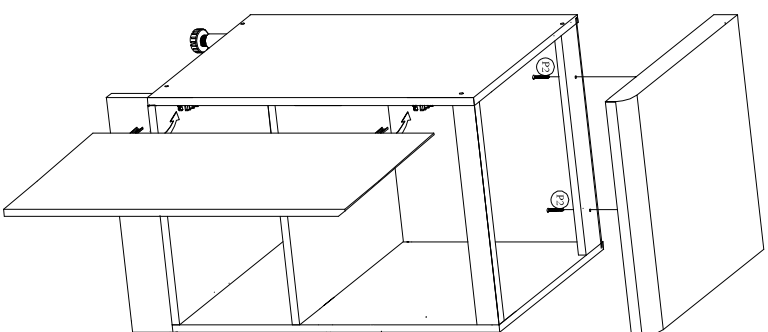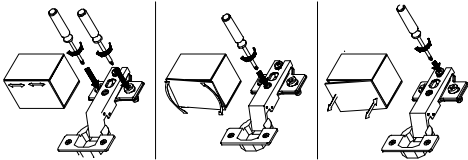

D3-D6L

